

SOA

Mounting & Wiring

Installation Instructions

For use with the Sage central battery system

A) MOUNTING METHODS

WALL OR CEILING MOUNT

Fix the universal adapter plate to the junction box with the supplied hardware, route the low voltage run through the base and seat the housing.

HEAD AIMING

Adjust the heads to put the beams on the path of egress; set the center-to-center spacing per the Sage layout.

B) WIRING & SYSTEM TEST

1. Turn off the central battery branch circuit before installation. All wiring per NEC and local code; the low voltage run is Class 2.
2. Connect the low voltage run from the Sage central battery (CB) or from the host exit or combo unit (RB) to the head leads, observing polarity per the circuit layout and the Sage central battery installation guide; low voltage wiring is not provided.
3. Seat the housing on its base, energize the central battery circuit and verify that the heads light in emergency operation.
4. Inspection: check the mounting and the head aim as local practice requires.

SAVE THESE INSTRUCTIONS

“Engineered for the spaces it protects.”